 
IP44. DE outside lighting[®]

pip poller

instructions for use

- 1. Remove baseplate from light-tube.
- 2. Conduct mains cable through the baseplate.
- 3. The baseplate has to be screwed on a foundation with the included fixing material; where necessary prepare a drainage system. Ensure a secure position and flushness with FFL (finished floor level).
- 4. Connect underground cable with cable connector inside the luminaire. Ensure tight seal of the PG fitting.
- 5. Slide light-tube onto baseplate and tight countersunk head screws flush and evenly. Avoid pinched cables.

installation: Possibility of through wiring with Y-connector inside luminaire (item no. 55312)



light technology:

230V Power LED / 2700K system performance: 6 W/273 Im A++> EEC

technical information:

operating voltage 230V / 50Hz

- protection class
- safety class 1

Luminaire is suitable for mounting on normal inflammable fixing surfaces.

(€ conformity mark

maintenance:

Disconnect the electrical installation.

This luminaire contains built-in LED lamps. The lamps cannot be replaced in the luminaire.

dimming:

The luminaire can be dimmed with an approved leading-or trailing edge dimmer. Please contact IP44.de service center for a list of approved dimmers.

care:

Regularly clean luminaire from dirt and deposits. Do not use a high pressure cleaner for cleaning.

Please note care instructions at www.IP44.de.

safety:

We point out that the electric connection of light fixtures has to be done by a certified installer.

We assume no accountability for damages which are a result of non-appropriate mounting or application of the luminaire.

Modifications on the luminaire will result in loss of warranty.

note: Moist concrete may be highly alkaline and must not contact the luminaire permanently! Therefore we recommend to provide a sufficient drainage in the installation area and to apply the foundation with a specialbase-coating.